


**INSTALLATION INSTRUCTIONS**

**FLYING SPIDER BY AUTOBAN**

**PARTS**

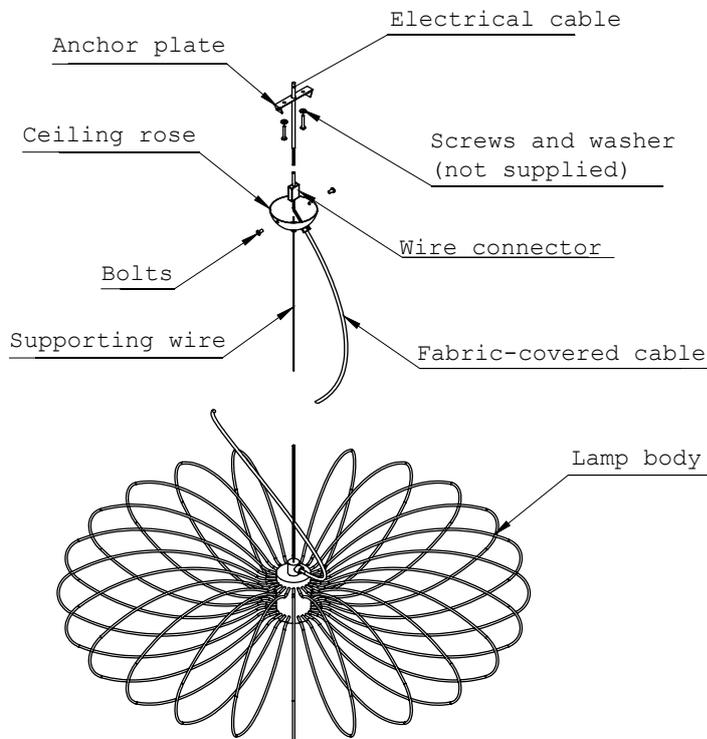

O  
1  
A  
U  
T  
O  
B  
A  
N

**YOU WILL NEED**

- Appropriate hardware for attaching the lamp to your specific ceiling
- Philips head screwdriver
- 4mm Allen Key
- An electrical screwdriver
- A professional electrician
- The help of a friend

**NOTES**

NOTE 1: Installation should only be performed by a professional electrician. All power must be turned off during installation.

NOTE 2: Your product arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet 'Unpacking Your Furniture' for further details.

NOTE 3: Great care is required when assembling our products as they can mark very easily if banged or dropped. Use blankets to soften the assembly surface.

NOTE 4: We advise that assembly and disassembly is undertaken by a minimum of 2 people and that one person is supporting the lamp body at all times during installation.

NOTE 5: When screwing in bolts, tighten well but be sure NOT TO OVERTIGHTEN.


**INSTALLATION INSTRUCTIONS CONTINUED**

FLYING SPIDER

INSTRUCTIONS


1. MOUNT ANCHOR PLATE TO CEILING

- a. Using the Philips head screwdriver, remove the anchor plate from the ceiling rose by loosening the bolts on either side.
- b. Pull electrical cable from the ceiling and insert into the central hole in the anchor plate.
- c. Attach the anchor plate to the ceiling using appropriate hardware inserted through the remaining holes in the anchor plate. Tighten firmly but do not overtighten.

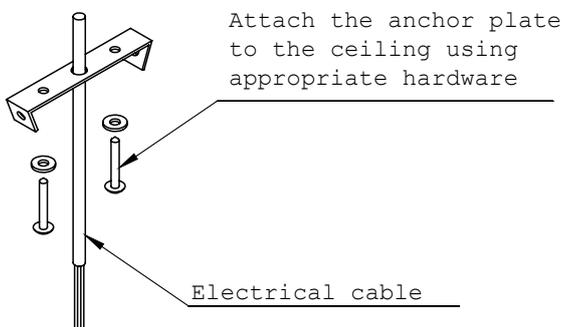

2. SET PREFERRED DROP LENGTH

- a. On the ceiling rose, loosen by hand the locking device that holds the support wire. Pull the wire to adjust it to the appropriate hanging length. Tighten the locking device by hand, then lightly tug the wire to confirm that is securely in place. Tidy up the excess wire by neatly coiling. We advise against cutting the wire in case of relocation or desire to change height in future.
- b. On the ceiling rose, use the 4mm Allen key to loosen the locking device that holds the fabric covered cable. Pull the fabric covered cable to adjust it to a suitable length for the supporting wire, but with some slack - the fabric covered cable should hang loosely. Tighten the locking device with the Allen key. Neatly coil the excess cable into the ceiling rose.

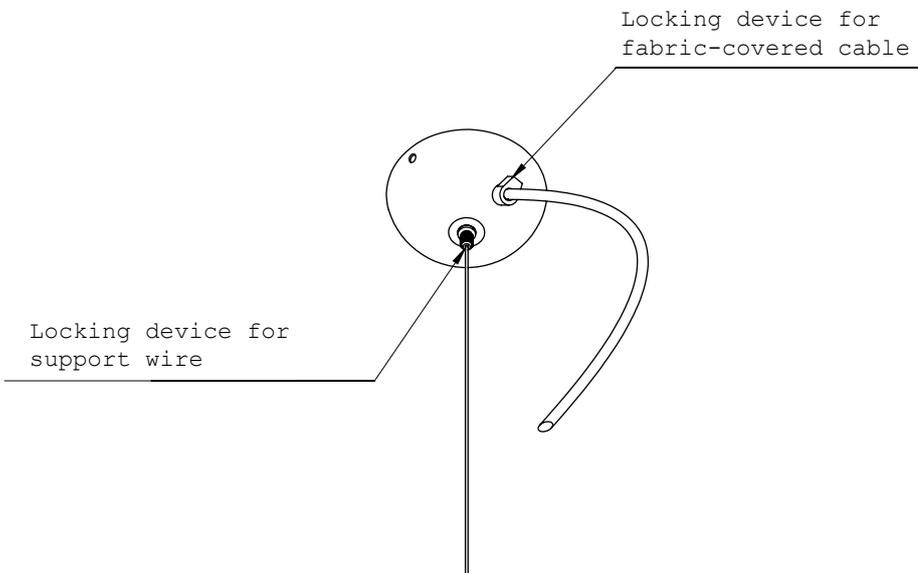


0  
2  
A  
U  
F  
O  
B  
A  
N


**INSTALLATION INSTRUCTIONS CONTINUED**  
**FLYING SPIDER**

3. CONNECT ELECTRICS

a. After the drop lengths have been set, use an electrical screwdriver to connect lamp electrics to ceiling electrics.

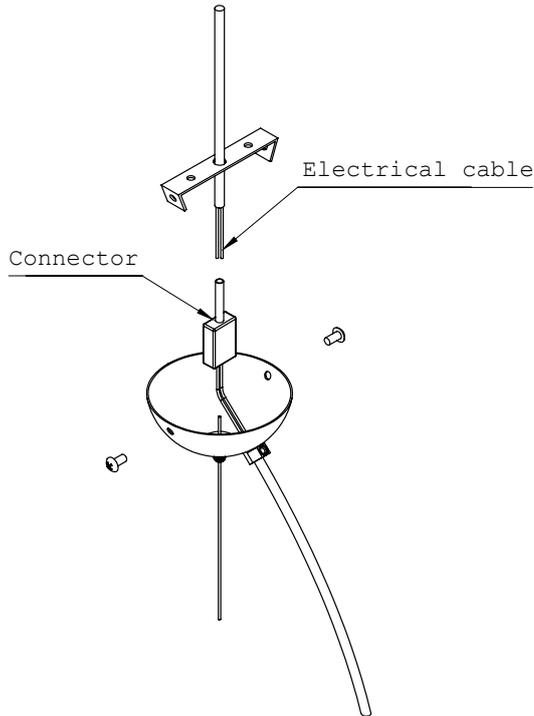

b. While holding the ceiling rose against the ceiling, align the holes on the sides of the ceiling rose with the holes in the sides of the anchor plate.  
c. Use the Philips head screwdriver to tighten both bolts firmly without overtightening.

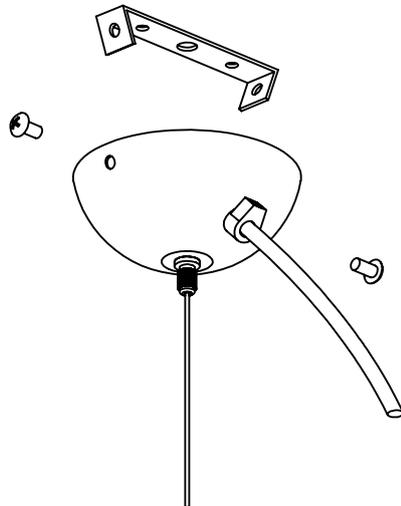

0  
3  
A  
U  
F  
O  
B  
A  
N