


**ASSEMBLY INSTRUCTIONS**

ORSON DESK AND ORSON COMPACT DESK BY MATTHEW HILTON

PARTS

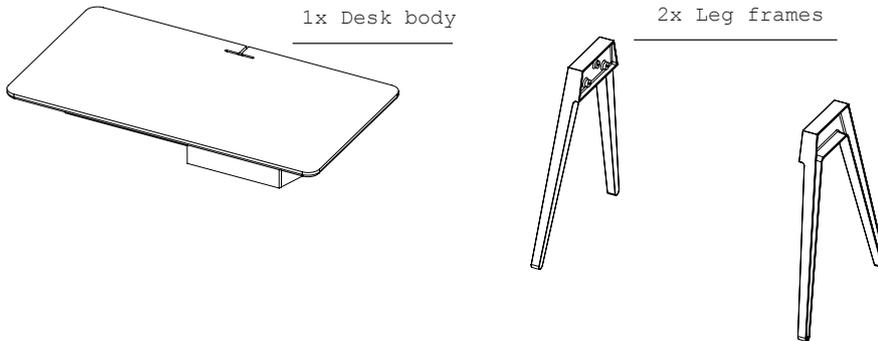

HARDWARE

(6x) M8x30 bolts (6x) washers



YOU WILL NEED

5mm heavy duty Allen Key  
The help of a friend

NOTES

NOTE 1: Be certain that all assembly is carried out on a flat and stable surface. This will ensure a good final result. Reverse the steps to disassemble the piece.

NOTE 2: Your furniture arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet "Unpacking Your Furniture" for further details.

NOTE 3: Great care is required when assembling our products . Use blankets to soften the assembly surface - hard surfaces such as wood or stone flooring may damage the furniture if in direct contact.

NOTE 4: We advise that assembly and disassembly of De La Espada furniture is undertaken by a minimum of 2 people.

NOTE 5: When screwing in bolts, tighten well, but be sure NOT TO OVERTIGHTEN. This can cause the thread to strip thus resulting in a poor connection.

NOTE 6: The Orson Desk is packed in two boxes. The larger box contains the main body and contains moveable parts: drawers on one side, and in the case of the full size Orson Desk, wire management compartment doors on the other. The smaller box contains the leg frames.

NOTE 7: Due to moving parts, you may find it helpful to leave the desk body wrapped in its bubble wrap, removing only that which is required to perform the assembly, until the desk is fully assembled and in the upright position.


O  
1  
M  
A  
T  
T  
H  
E  
W  
H  
I  
L  
T  
O  
N

**ASSEMBLY INSTRUCTIONS CONTINUED**  
**ORSON DESK AND ORSON COMPACT DESK**

INSTRUCTIONS


1) ATTACH THE LEGS TO THE DESK BODY

a) Place the desk body face down on the floor, the belly of the desk facing upwards and bubble wrap still in place. Remove enough bubblewrap from the desk belly to reveal the pre-drilled holes.

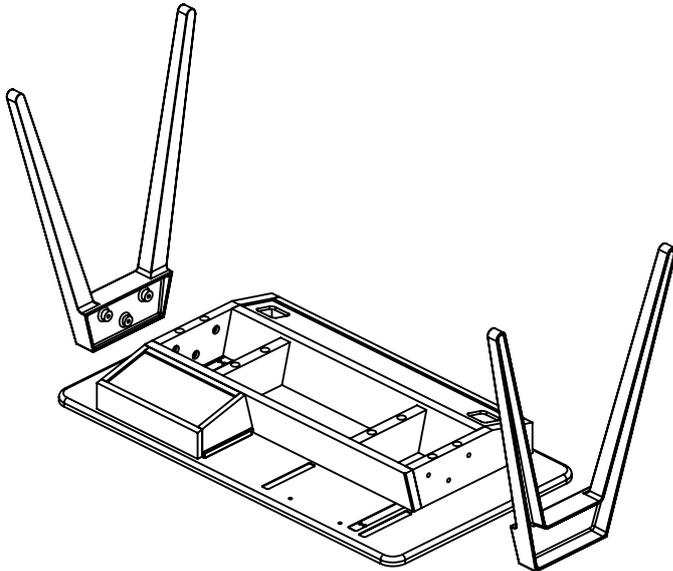

b) Take one leg frame, turn it upside down, and align the holes with those in the desk body. Insert a bolt with washer into each of the three holes and tighten firmly with a 5mm Allen Key.

c) Repeat the above process to attach the second leg frame.

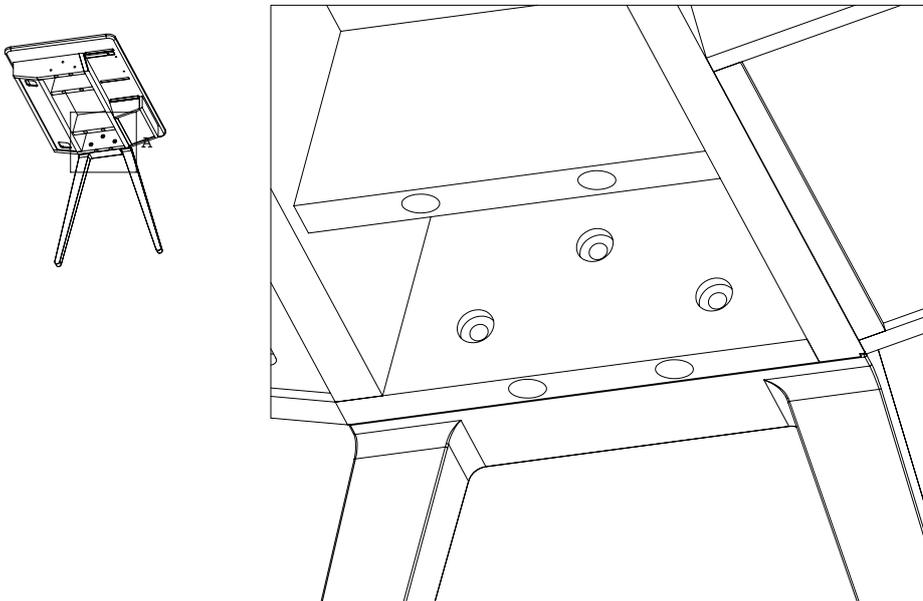

0  
2  
M  
A  
T  
T  
H  
E  
W  
H  
I  
L  
T  
O  
N

**ASSEMBLY INSTRUCTIONS CONTINUED**  
**ORSON DESK AND ORSON COMPACT DESK**

2) PREPARE THE DESK FOR USE

a) With the help of a partner, flip the desk into the upright position so that it is resting on its legs. Please ensure that the desk is not rested on two legs as it is flipped over as this may cause damage to the desk. Be aware of the moving parts while flipping the desk, being careful to prevent movement and thus avoid damage to the parts.



b) If the desk is rocking, slightly loosen the three bolts connecting the legs to the desk body. If this is done while the desk is in its natural upright position, it will allow the legs to settle into the best possible position for the floor upon which it rests. After finding the best position, tighten the bolts firmly.

3) Remove the remaining bubblewrap from the desk.

4) The assembly is complete as the desk is ready for use.

0  
3  
M  
A  
T  
T  
H  
E  
W  
H  
I  
L  
E  
I  
N