


ASSEMBLY INSTRUCTIONS

764T SHAKER DINING TABLE (TIMBER TOP) BY NERI&HU

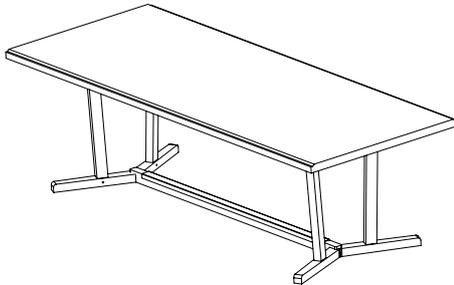

PARTS

- 1x Tabletop
- 1x Subframe
- 2x Leg frames
- 1x Cross beam

Hardware:

(18x) M8x60 Screws



(12x) M8x50 Countersunk Screws



(18x) M8 washers



YOU WILL NEED

- 6mm Allen Key
- The help of a friend

NOTES

NOTE 1: Be certain that all assembly is carried out on a flat and stable surface. This will ensure a good final result. Reverse the steps to disassemble the piece.

NOTE 2: Your furniture arrives packed in numerous layers that protect it during transport. It is important that you remove the packaging carefully to avoid damaging your furniture. Refer to our information sheet "Unpacking Your Furniture" for further details.

NOTE 3: Great care is required when assembling our products . Use blankets to soften the assembly surface - hard surfaces such as wood or stone flooring may damage the furniture if in direct contact.

NOTE 4: We advise that assembly and disassembly of De La Espada furniture is undertaken by a minimum of 2 people.

NOTE 5: When screwing in bolts, tighten well, but be sure NOT TO OVERTIGHTEN. This can cause the thread to strip thus resulting in a poor connection.

NOTE 6: While you work, be sure all connections are flush with no gaps.

NOTE 7: After assembly, ensure that the table is resting on a level surface.

O
1
N
E
R
I
&
H
U

ASSEMBLY INSTRUCTIONS CONTINUED


764T SHAKER DINING TABLE

INSTRUCTIONS

1. ATTACH LEG FRAMES TO THE SUBFRAME

a) Place the subframe upside down a clean, soft surface such as blanket or carpet on the floor.


b) One at a time, place each leg frame face down, matching the number the leg frame with the number marking on the subframe. Connect each leg frame with 4x M8x50 Countersunk Screws, tightening with an Allen key.

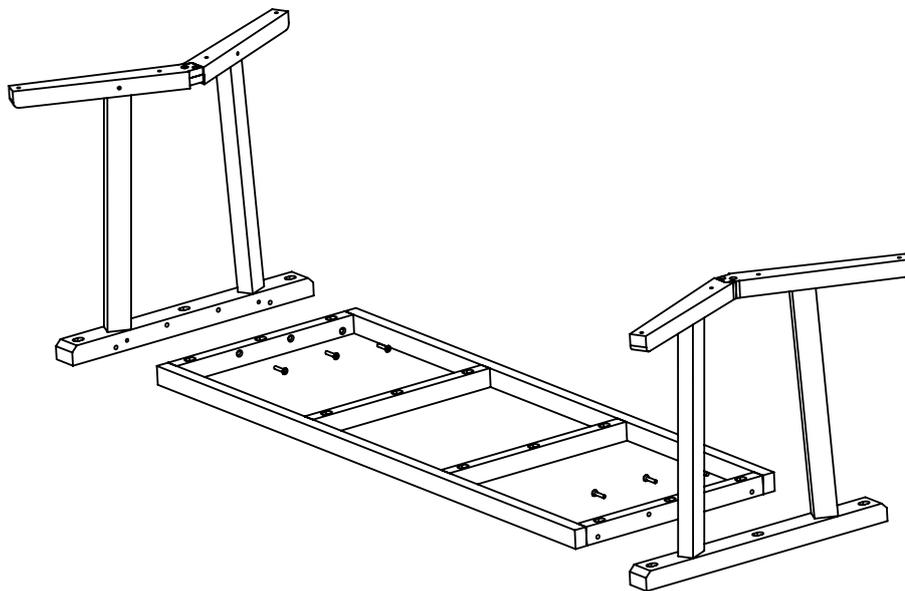

2) ATTACH CROSS BEAM

a) Match the numbers on the crossbeam with the numbers on the leg frames to ensure the correct orientation.

b) Insert 4x M8x50 Countersunk Screws through the base of the leg frame and into the corresponding holes in the cross beam. Tighten with an Allen Key.

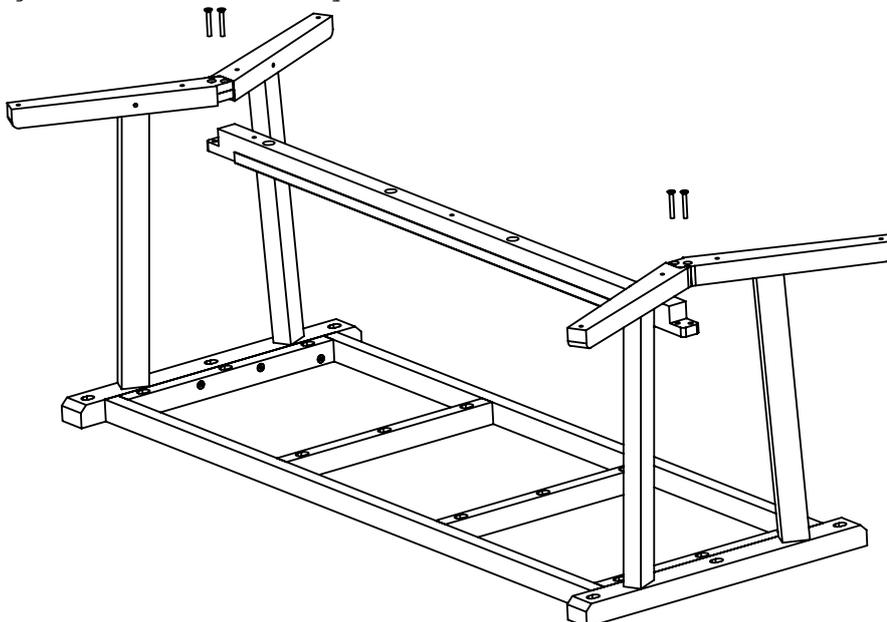

0
2
N
E
R
I
&
H
U

ASSEMBLY INSTRUCTIONS CONTINUED


764T SHAKER DINING TABLE

3) ATTACH TABLETOP


a) With the help of a friend, carefully turn the assembled substructure over into an upright position, taking care not to place any weight/force on the table legs while turning.

b) Place the tabletop onto the substructure, being sure to match the numbers on each part for the correct orientation.

c) Align the holes on the substructure with the holes on the tabletop. Place a washer onto each of the 18x M8x60 screws and insert into the predrilled holes. Tighten firmly with an Allen Key.

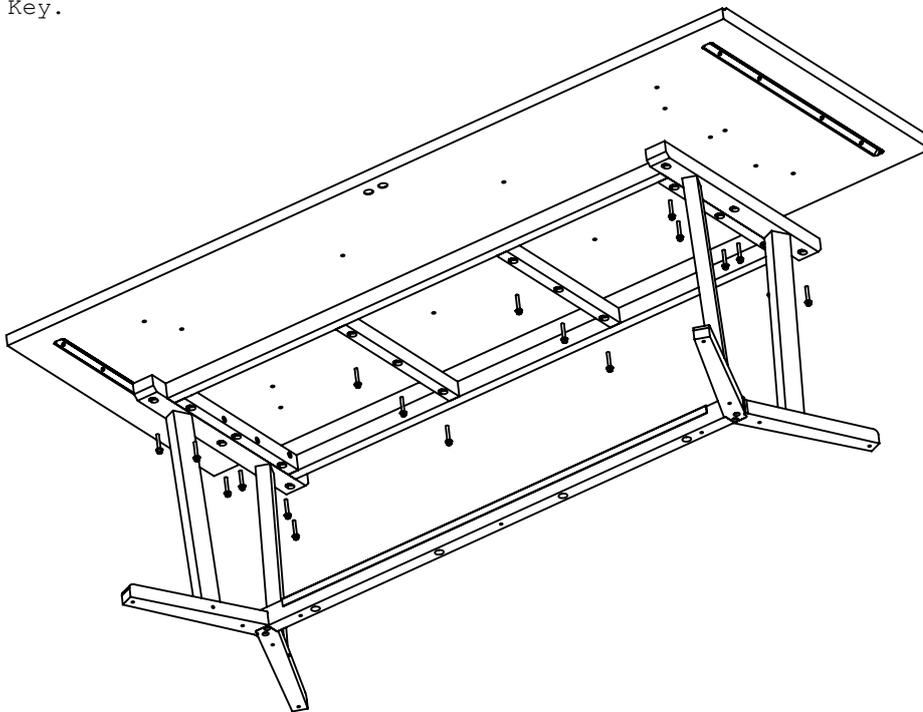

d) The table is now ready for use.

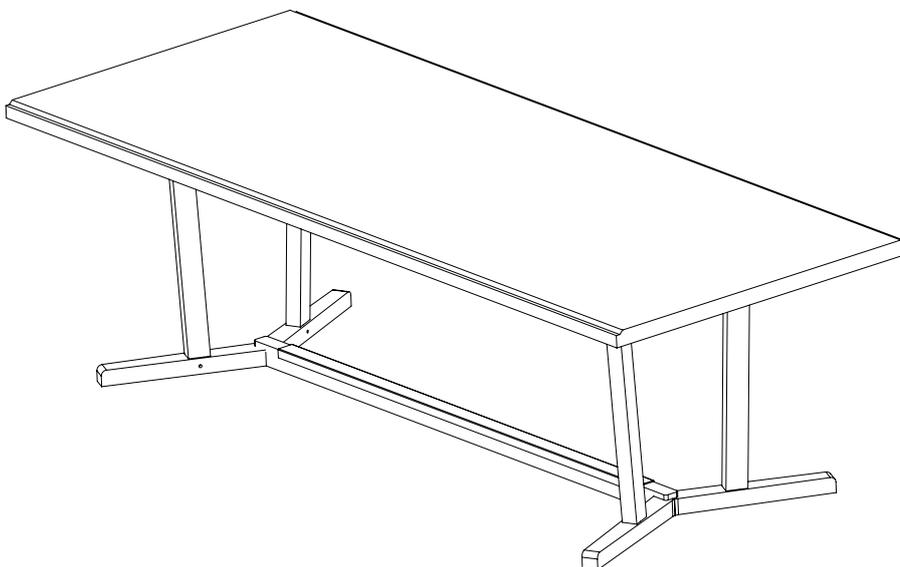

0
3
N
E
R
I
&
H
U